

S-Z81D


 **PIONEER®**

BEFORE USE

- Please read this operating guide through before using your speaker system so you will know how to make the most of its performance. After you have finished reading the operating guide, store the guide in a safe place. You will then know where it is, should you wish to refer to it if something is unclear while the speaker system is being used.
- The nominal impedance of this speaker system is 6 ohms. Connect the speaker system to a stereo amplifier with a load impedance ranging from 4 to 16 ohms (a model with "4 - 16 Ω " displayed on the speaker output terminals).
- In order to prevent damage to the speaker system resulting from input overload, please observe the following precautions:
- Do not supply power to the speaker system in excess of the maximum permissible input.
- When connecting or disconnecting pin-plugs, be sure amplifier power is OFF.
- When using a graphic equalizer to emphasize loud sounds over a high frequency range, do not use excessive amplifier volume.
- Do not try to force a low-powered amplifier to produce loud volumes of sound (the amplifier's harmonic distortion will be increased, and you may damage the tweeter).
- Do not touch the speaker cones' reverberating surfaces as they may be damaged by external force.
- When using a personal computer with audio capability, high frequency signals tend to be overly strong. Therefore, attenuate high frequencies or use at low volume levels.

INSTALLATION

- These speaker systems are magnetically shielded. However, depending on the installation location, color distortion may occur if the speakers are installed extremely close to the screen of a television set or monitor. In this event separate the speakers farther from the television screen.
- This speaker system includes speakers meant for installation on the right, and those for the left side. On the back of the speakers can be found an L (left) or R (right) indicating the side on which the speaker is to be used. Viewed from the listening position, place the L speaker on the left, and the R speaker on the right side (there may be cases where room conditions may result in better results from reversing the installation positions).
- The ideal listening position is at or slightly beyond the apex of an imaginary equilateral triangle with the speaker system forming the base line.

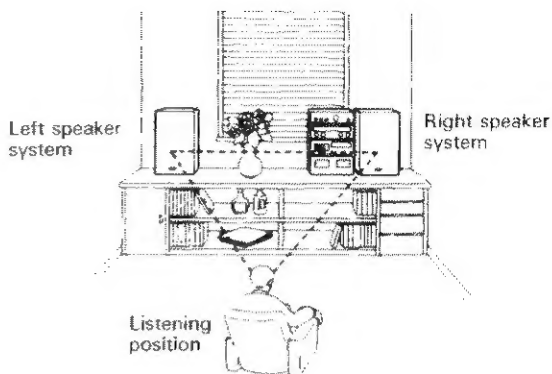


- This speaker system is designed as a book-shelf type. When it is installed directly on the floor, reflected sound from the floor surface may be increased, increasing the bass and possibly making the sound unpleasant to listen to. In this case, mount the speaker system on a stand or concrete block to raise it above floor level. In general, best results will be obtained if the speaker system is installed so that the tweeters are on approximately the same level as the listener's ears.

INSTALLATION PRECAUTIONS

- Do not install this speaker system near a stove or other heating appliance, and do not put it in a place exposed to the sun. Locations like these may cause the cabinet to change color and the speaker system to break down.
- Remember that this speaker system is quite heavy, so it is dangerous to install it in a high place like on a wall or pillar or in other unstable locations.

CONNECTIONS

1. Set the amplifier's power switch to OFF.
2. Connect the speaker cords to the amplifier's speaker output terminals. Connect the red cord to the \oplus terminal and the black cord to the \ominus terminal.

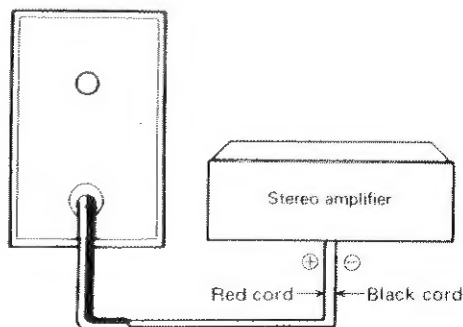

NOTES:

- Make sure that the speaker cords are connected to the terminals securely. Insecure connections may cause not only sound to be interrupted and noise to be generated but also the cords to be shorted and the amplifier to break down.
- When listening to a stereo performance with the speaker system connected to a stereo amplifier, you will find that the bass is insufficient, the sound is not spread out and there is no stereo effect if the cords of one of the speaker systems have been plugged into the wrong polarity terminals.
- Viewed from the front, connect the right-side speaker system to the right channel (R) of amplifier's speaker output terminals, and the left-side speaker system to the left channel (L).

CABINET MAINTENANCE

- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the cabinet is very dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.
- Never use thinners, benzine, insecticide sprays and other chemicals on or near the cabinets, since these will corrode the surfaces.


SPECIFICATIONS

Enclosure	Book-shelf style, Bass-reflex type
System	3-way, 3-speaker system
Loudspeakers:	
Woofer	23 cm (9 in) cone type
Tweeter	6.6 cm (2-1/2 in) cone type
Super tweeter	1.8 cm (3/4 in) dome type
Nominal Impedance	6 Ω
Frequency Range	48 to 20,000 Hz
Sensitivity	91 dB/W at 1 m distance
Maximum Power	75 W
External Dimensions	270(W) \times 453(H) \times 210(D) mm 10-5/8(W) \times 17-13/16(H) \times 8-1/4(D) in
Weight	5.0 kg/11 lb 0 oz (each one)
Accessory Parts	Operating Guide \times 1


NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

FREQUENCY RESPONSE AND HARMONIC DISTORTION

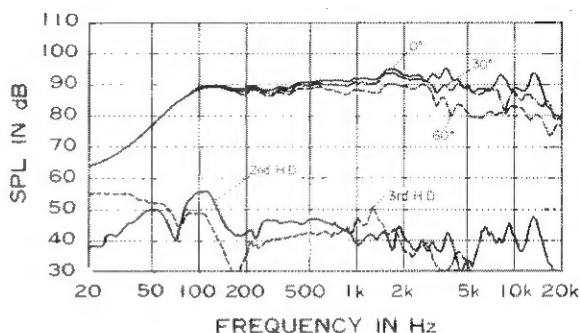

IMPEDANCE

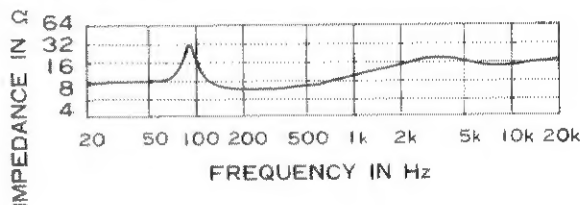

PIONEER ELECTRONIC CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS [USA] INC.

2265 East 220th Street Long Beach, California 90810 U.S.A.

P.O. BOX 1720 Long Beach, California 90801-1720 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC.

505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

PIONEER ELECTRONIC [EUROPE] N.V.

Keetberglaan 1, 2740 Beveren, Belgium TEL. 03/775-28 08

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195 Australia TEL. [03] 580-9911